 

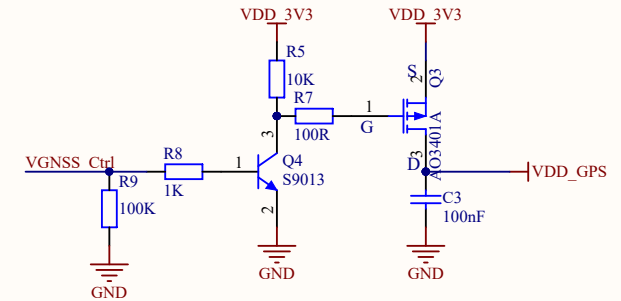
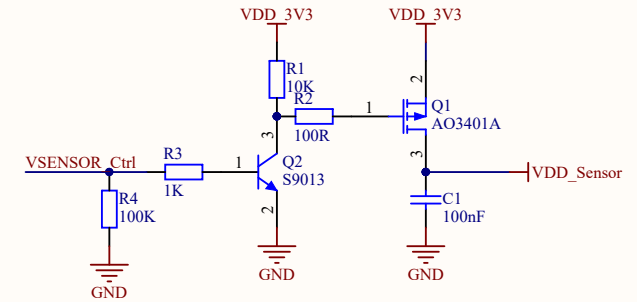
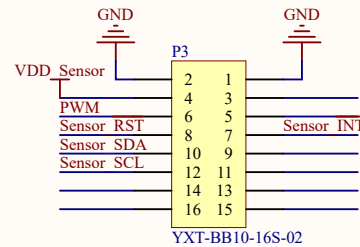
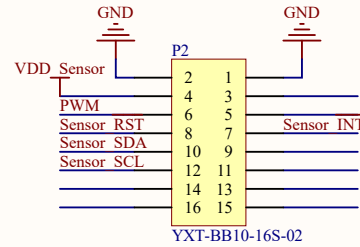


Tip: BTB(P1) pins are labeled according to RC32 pins.

If using other devices, please refer to this document for pin correspondence.

https://wiki.heltec.org/docs/devices/open-source-hardware/radio_core_series/pin_comparison

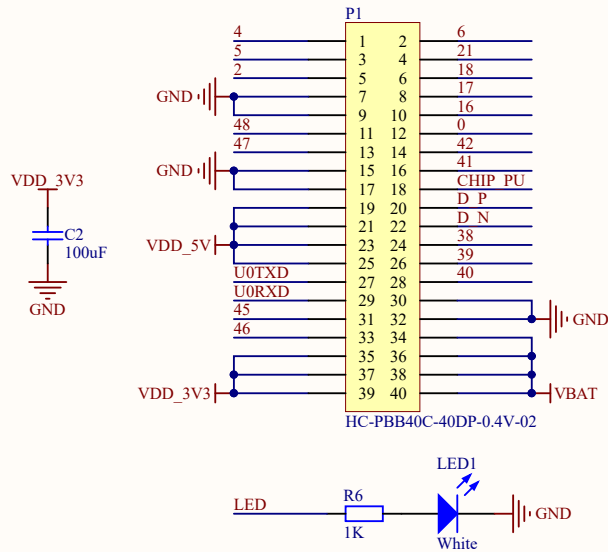

VGNSS Ctrl	45
GNSS TX	U0RXD
GNSS RX	U0TXD
PPS	41
GNSS RST	40

VSENSOR Ctrl	46
Sensor SCL	18
Sensor SDA	21
Sensor INT	42
Sensor RST	2

PWM	48
LED	47

