



Auto-Reset

Pin	Default	Boot	Download
GPIO0	1	x	0
U0TXD	1	1	x
GPIO2	0	x	0
GPIO4	0	x	x
MTDO	1	x	x
GPIO5	1	1	x
U0TXD, GPIO2, GPIO5	are floating, GPIO0 determines boot mode.		

IF DTR is LOW, toggling DTR from HIGH to LOW resets to run mode.  
IF RTS is HIGH, toggling DTR from LOW to HIGH resets to bootloader.

